

Horizontal Cable Manager

AR8600A, AR8602A, AR8603A, AR8605, AR8606, AR8612

		Depth	
		4 in. (101.6 mm)	6 in. (152.4 mm)
Height	1U	AR8602A	AR8612
	2U	AR8600A	AR8603A AR8606
	3U		AR8605

Tools Required (not provided)









Hex Nut (2) Cage Nut (4)

Cage Nut Screw (4)

Phillips Screwdriver


10 mm Crescent Wrench




Cage Nuts

NOTE: Read and follow the manufacturer's installation instructions for your rackmount equipment.

Locate the top and bottom U-space on the vertical mounting rails. Every third hole on the mounting rails is numbered to indicate the middle of a U-space.




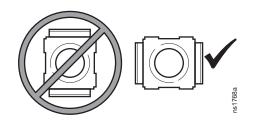

NOTES:

Install cage nuts horizontally, with the ears engaging the sides of the square hole.

Install the cage nuts on the interior of the vertical mounting flange.

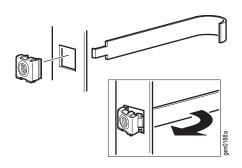

Installation:

From inside the enclosure, insert the cage nut into the square hole.

Hook one ear of the cage nut assembly through the far side of the hole.

Place the cage nut tool on the other side of the cage nut and pull to snap into position.

A CAUTION

HAZARD OF FALLING EQUIPMENT

Never install cage nuts vertically with the ears engaging the top and bottom of the square hole. This will result in insecure mounting for rack-mounted equipment.

Failure to follow these instructions can result in injury or equipment damage.

Removal:

Remove any attached screw.

Grasp the cage nut and squeeze the sides to release it from the square hole.

Installation

Adjust the depth of the vertical mounting rails (if needed) for non-networking cabinets.

