


APC Back-UPS[®] Pro 900

Premium Battery Backup with Surge Protection for Electronics and Computers

The Back-UPS Pro provides abundant battery backup power, so you can work through medium and extended length power outages. It safeguards your equipment against damaging surges and spikes that travel along utility and data lines. And it features automatic voltage regulation (AVR), which instantly adjusts high and low voltages to safe levels, so you can work indefinitely during brownouts and overvoltages.

The Back-UPS Pro also includes unique “green” features, like power-saving outlets that automatically turn off idle peripherals. A high efficiency charging system and “AVR Bypass” also reduce power consumption. With the rest of the Back-UPS Pro’s standard features, this is the perfect unit to protect your productivity from the constant threat of bad power and lost data.

Product Features:

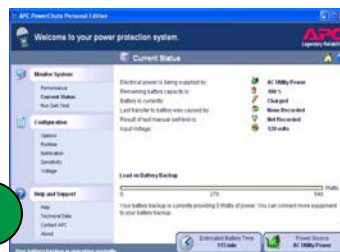

- 1 LCD (Liquid Crystal Display)** gives the status of over 20 different utility and battery backup conditions.
- 2 Automatic Voltage Regulation (AVR)** instantly corrects voltages fluctuations so you can work indefinitely through brownouts and overvoltages.
- 3 “Battery Backup & Surge Protected” Outlets** keep a CPU, monitor and other critical devices running when the power goes out or fluctuates outside safe levels. (Includes one power-saving *Controlled* outlet).
- 3 “Surge Only” Outlets** protect printers, faxes or other equipment without reducing battery capacity. (Includes two power-saving “*Controlled*” outlets).
- 5 Data Line Surge Protection** guards against surges and spikes traveling over Ethernet and telephone lines.
- 6 Auto Shutdown Software** allows management of the Back-UPS from your computer via USB or serial interface:
 - Saves files and shuts down system when battery is low
 - Records utility power and battery conditions
 - Allows for customized set up
- 7 Push Button Circuit Breaker** enables quick recovery from overloads.
- 8 3 Yr Warranty**, 150,000 Euro Equipment Protection Policy, free technical support and data recovery services.
- 9 Automatic Diagnostic Testing** ensures your unit is ready when you need it.

Back-UPS Pro 900 Specifications

Model Number	BR900G-FR
Output	
Output Capacity	900 VA / 540 Watts
Output Volt., Freq. (on utility)	230V, 50 or 60 Hz, +/- 3Hz (auto sensing)
Output Volt., Freq. (on battery)	230V +/-8%, 50 or 60Hz +/-1Hz (auto sensing)
Output Connections	6 total French outlets: 3 battery & surge (including one power-saving <i>Controlled</i> outlet) 3 surge protection only (including 2 power-saving <i>Controlled</i> outlets)
Waveform Type	Stepped Approximation to Sine Wave
Input	
Input Voltage, Frequency	230V, 50 or 60 Hz, +/- 3Hz (auto sensing)
Input Connection	1,8 m French power cord
Surge Protection	
AC Power Surge Protection	All outlets
Data Line Surge Protection	Analog phone line for phone/fax/modem/DSL Network: up to 1000 Base-T (gigabit) Ethernet
Physical	
Unit Dimensions (H x W x D)	25,0 x 10,0 x 38,2 cm
Unit Weight	11,7 kg
Shipping Dims. (H x W x D)	33,3 x 22,5 x 48,9 cm
Shipping Weight	12,8 Kg
Color	Black
UPC Code	731304279594
Battery	
Battery Type	Sealed, lead-acid, maintenance-free
Management	
Alarms	Visual (LCD) and audible alarms
Auto-Shutdown Software	PowerChute Personal Edition (with USB and serial interface)
Safety	
Certification/Approvals	NEMKO-GS, GOST, CE, C-Tick, KETI, TISI, A-Tick

APC by Schneider Electric

132 Fairgrounds Rd
West Kingston, RI 02892

www.apc.com

